

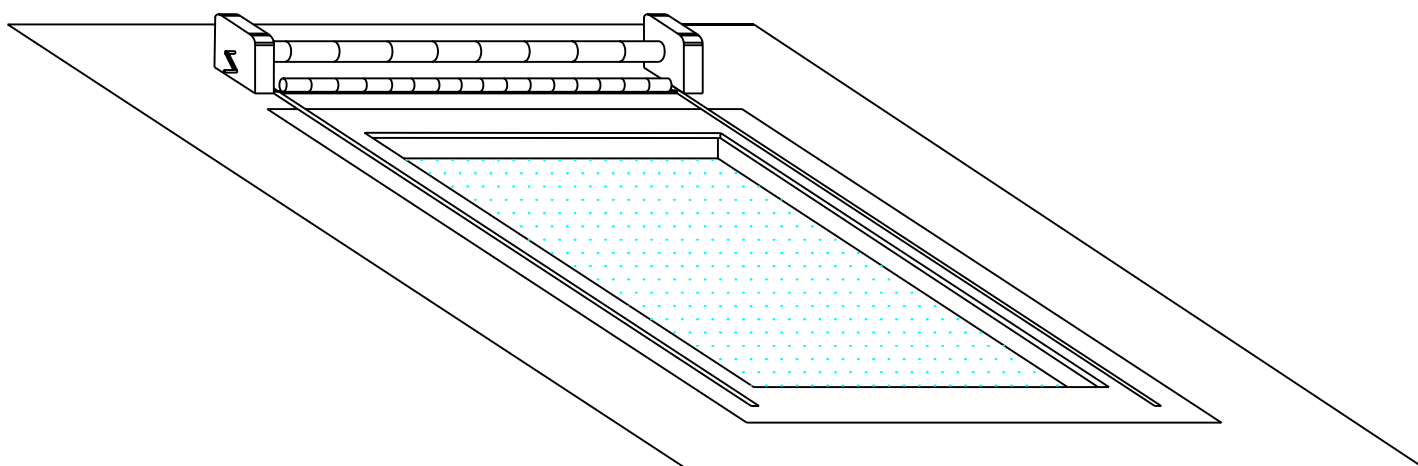





126 Manual Mechanism

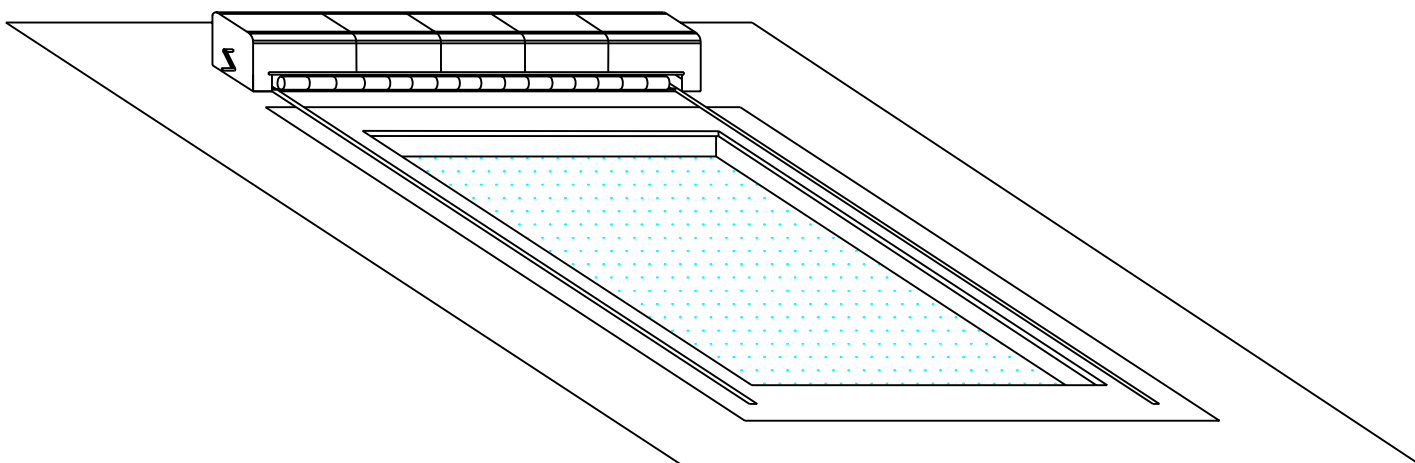

TOP TRACK




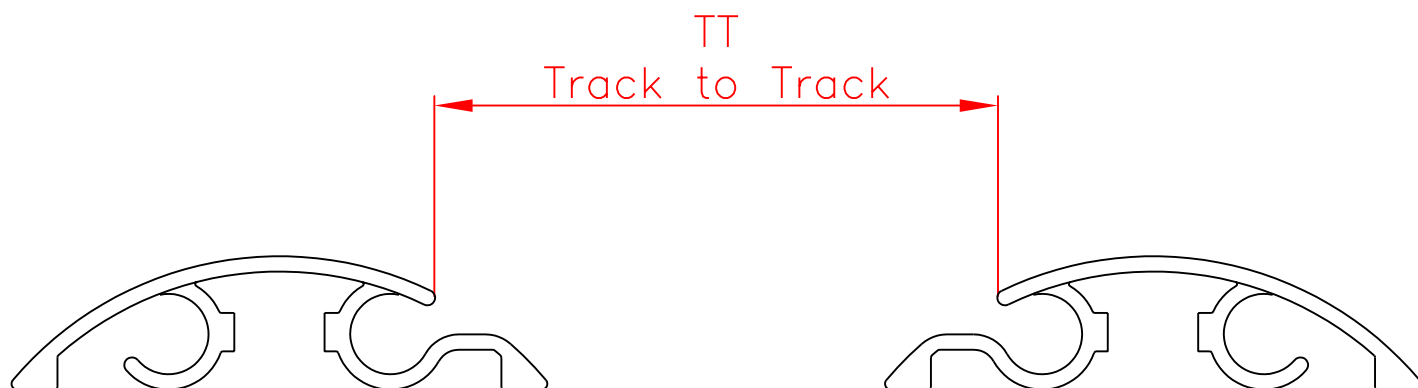


Important to keep tracks in level!

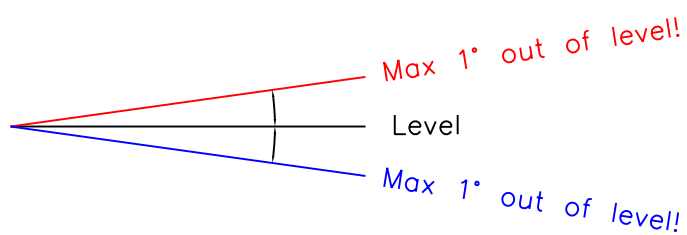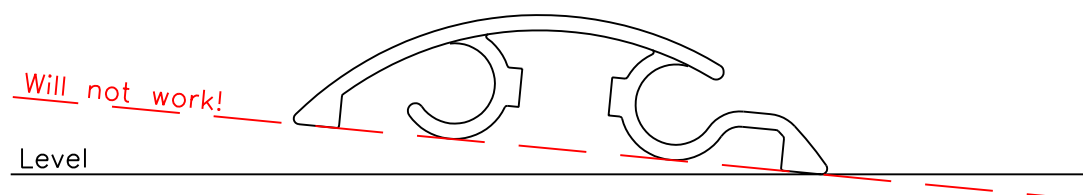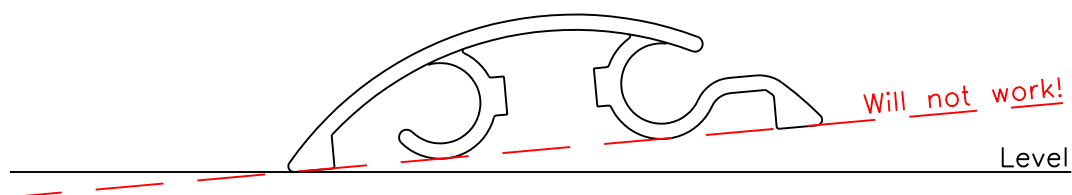

The track should have the same distance all the way.
(Difference more than 10mm can be a problem.)


TOP TRACKS

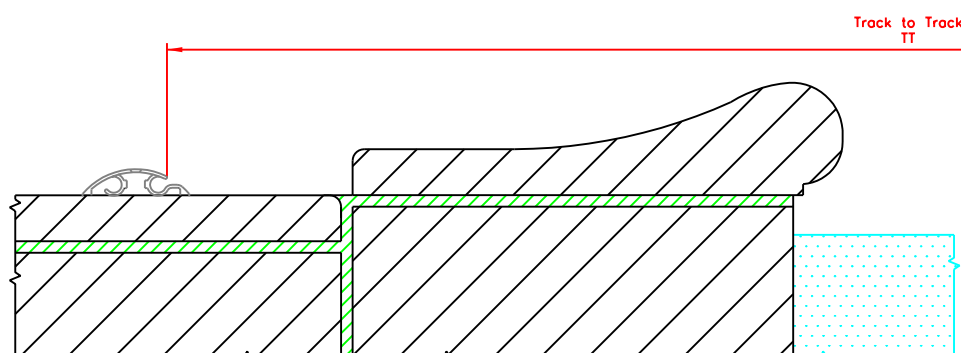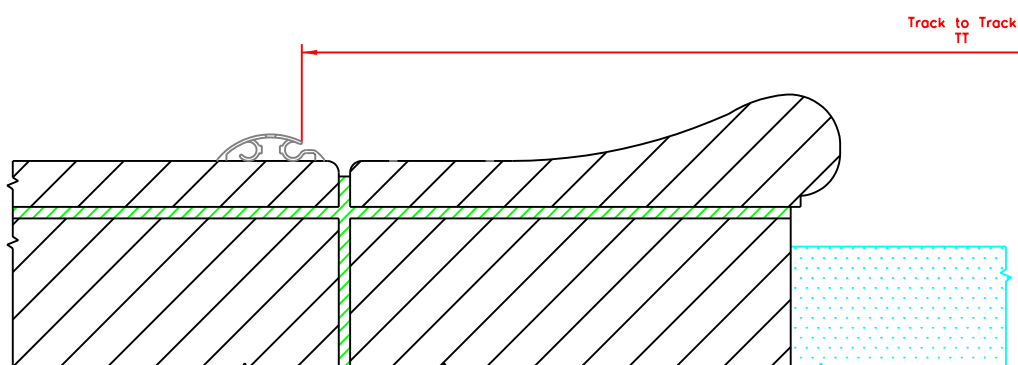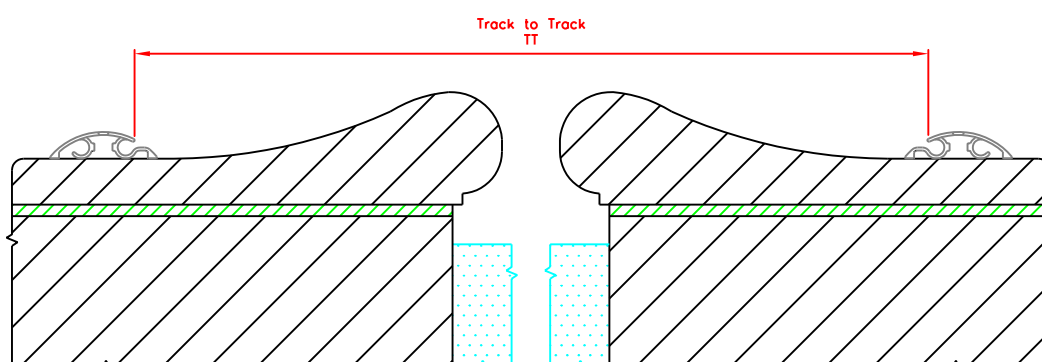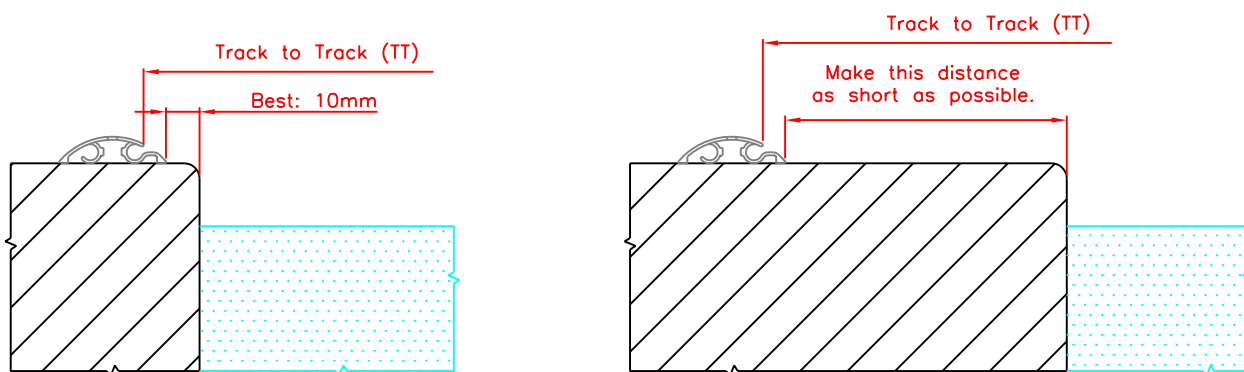

HYDRAULIC II - TOP OR FLUSH TRACK - TOP MECHANISM FOR COVERS UP TO 10m LENGTH


MEASUREMENT CONTROL

1. Track to Track TT1: (guide end) _____mm
2. Track to Track TT2: (middle) _____mm
3. Track to Track TT3: (track end) _____mm
4. Max. Track to Track difference: _____mm
5. Track length TL: _____mm
6. Diagonal 1: _____mm
7. Diagonal 2: _____mm
8. Date: _____ Control: _____sign.

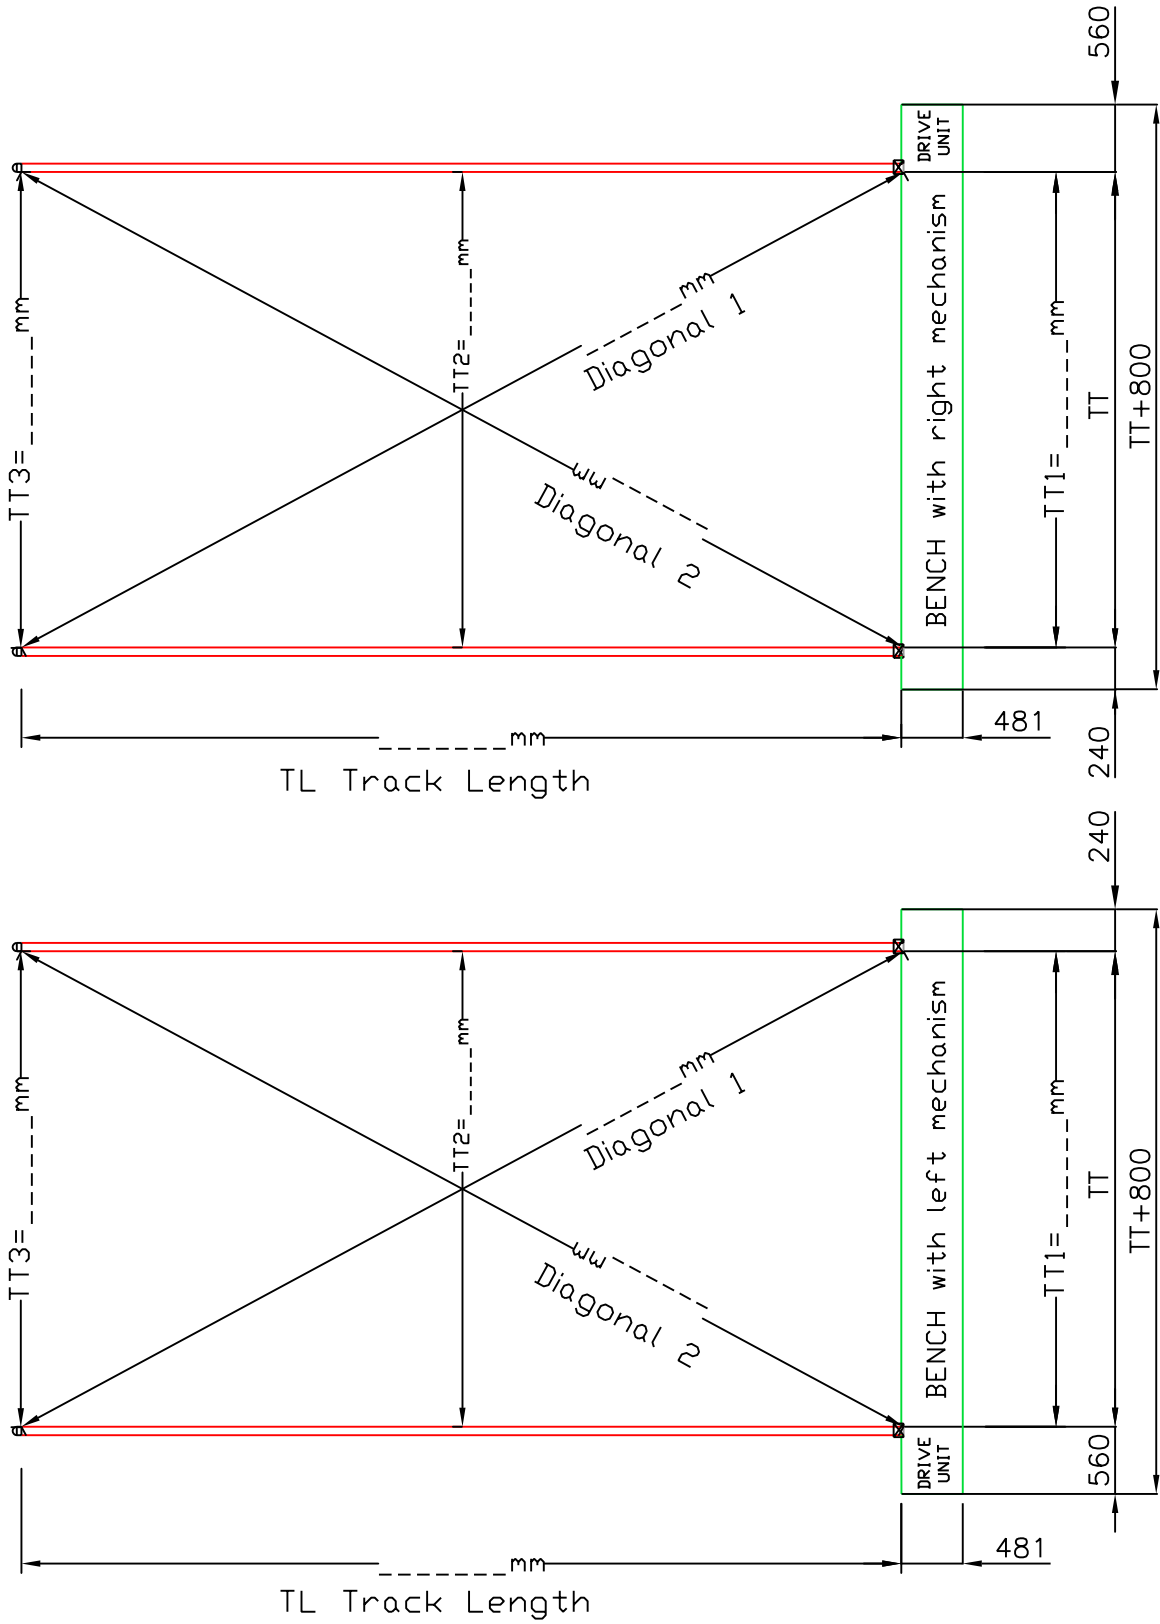


Side of mechanism is specified by the look from here.


336 MANUAL Place the track.

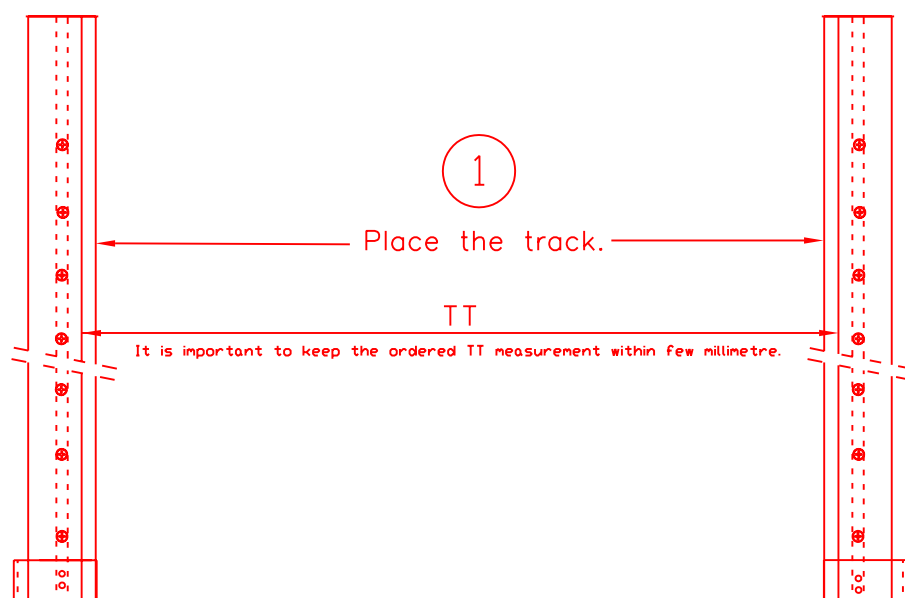


337 MANUAL Leave the screws 10mm open.

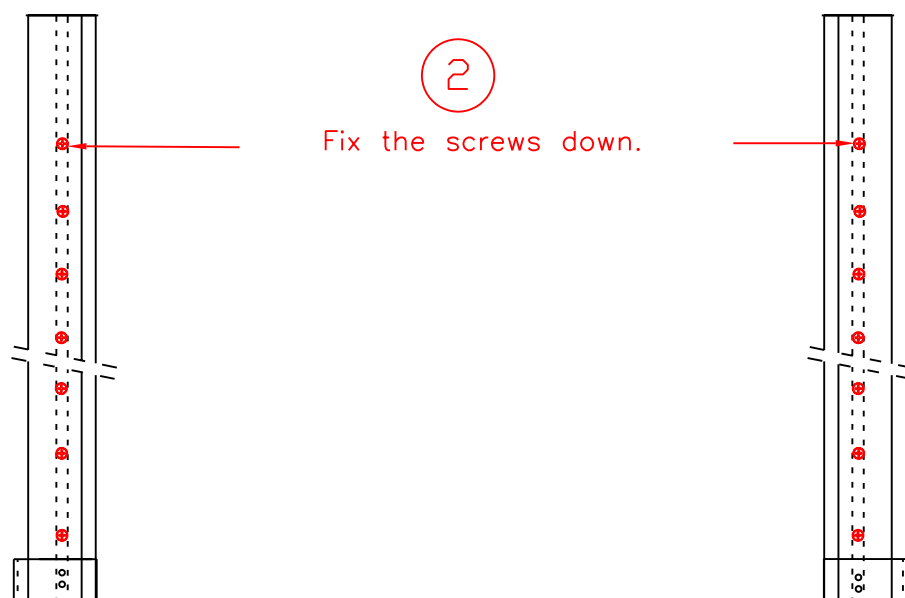


338 MANUAL Install the End Caps.

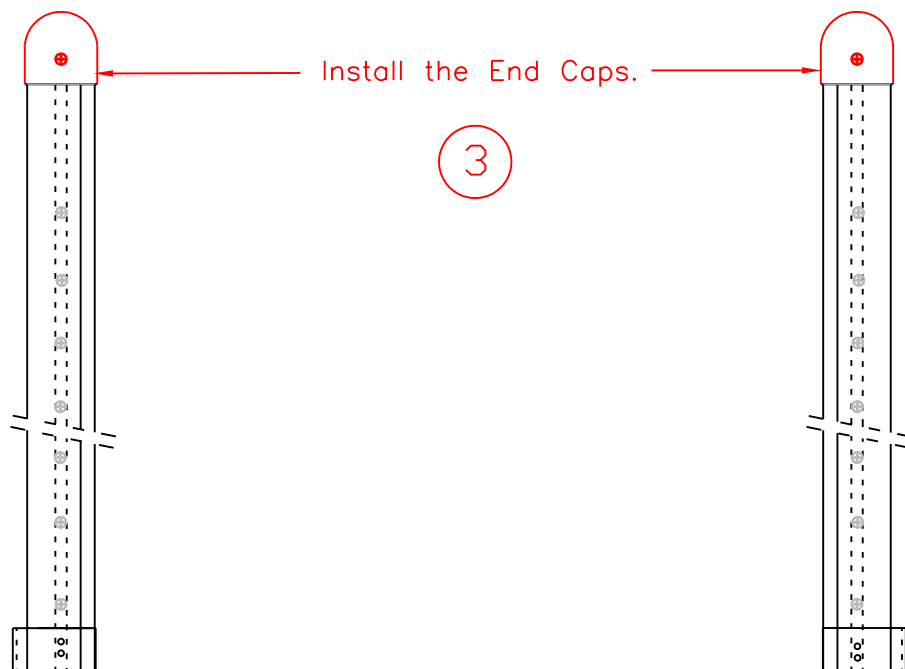


339 MANUAL Cover through the Guides.

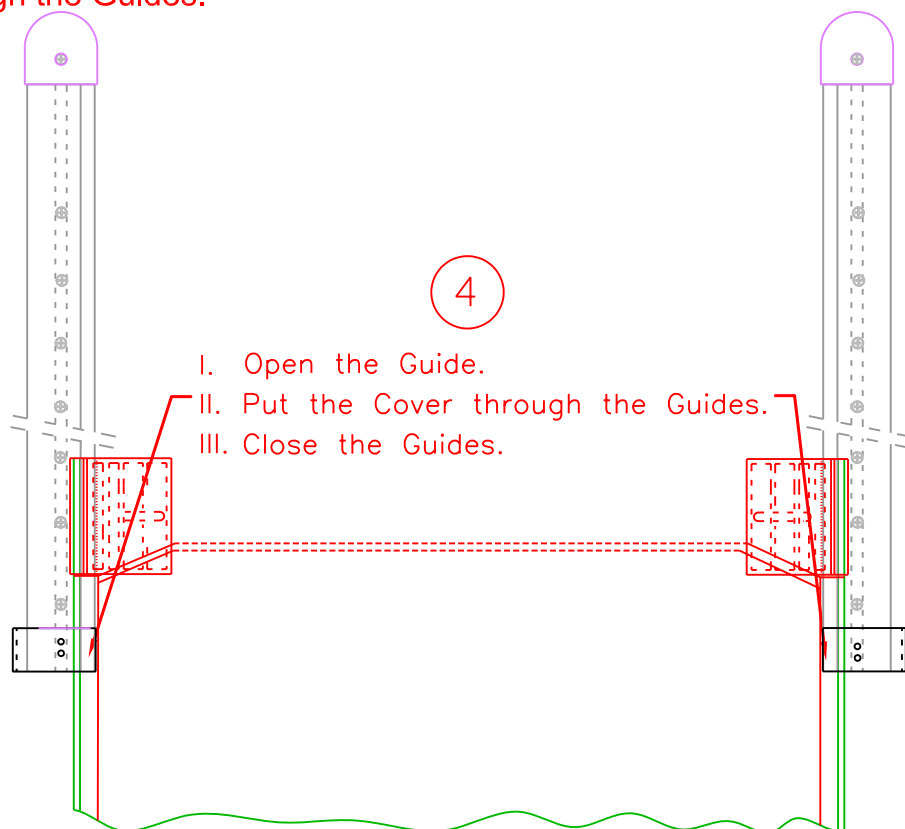


DIRECTION TOWARDS MECHANISM

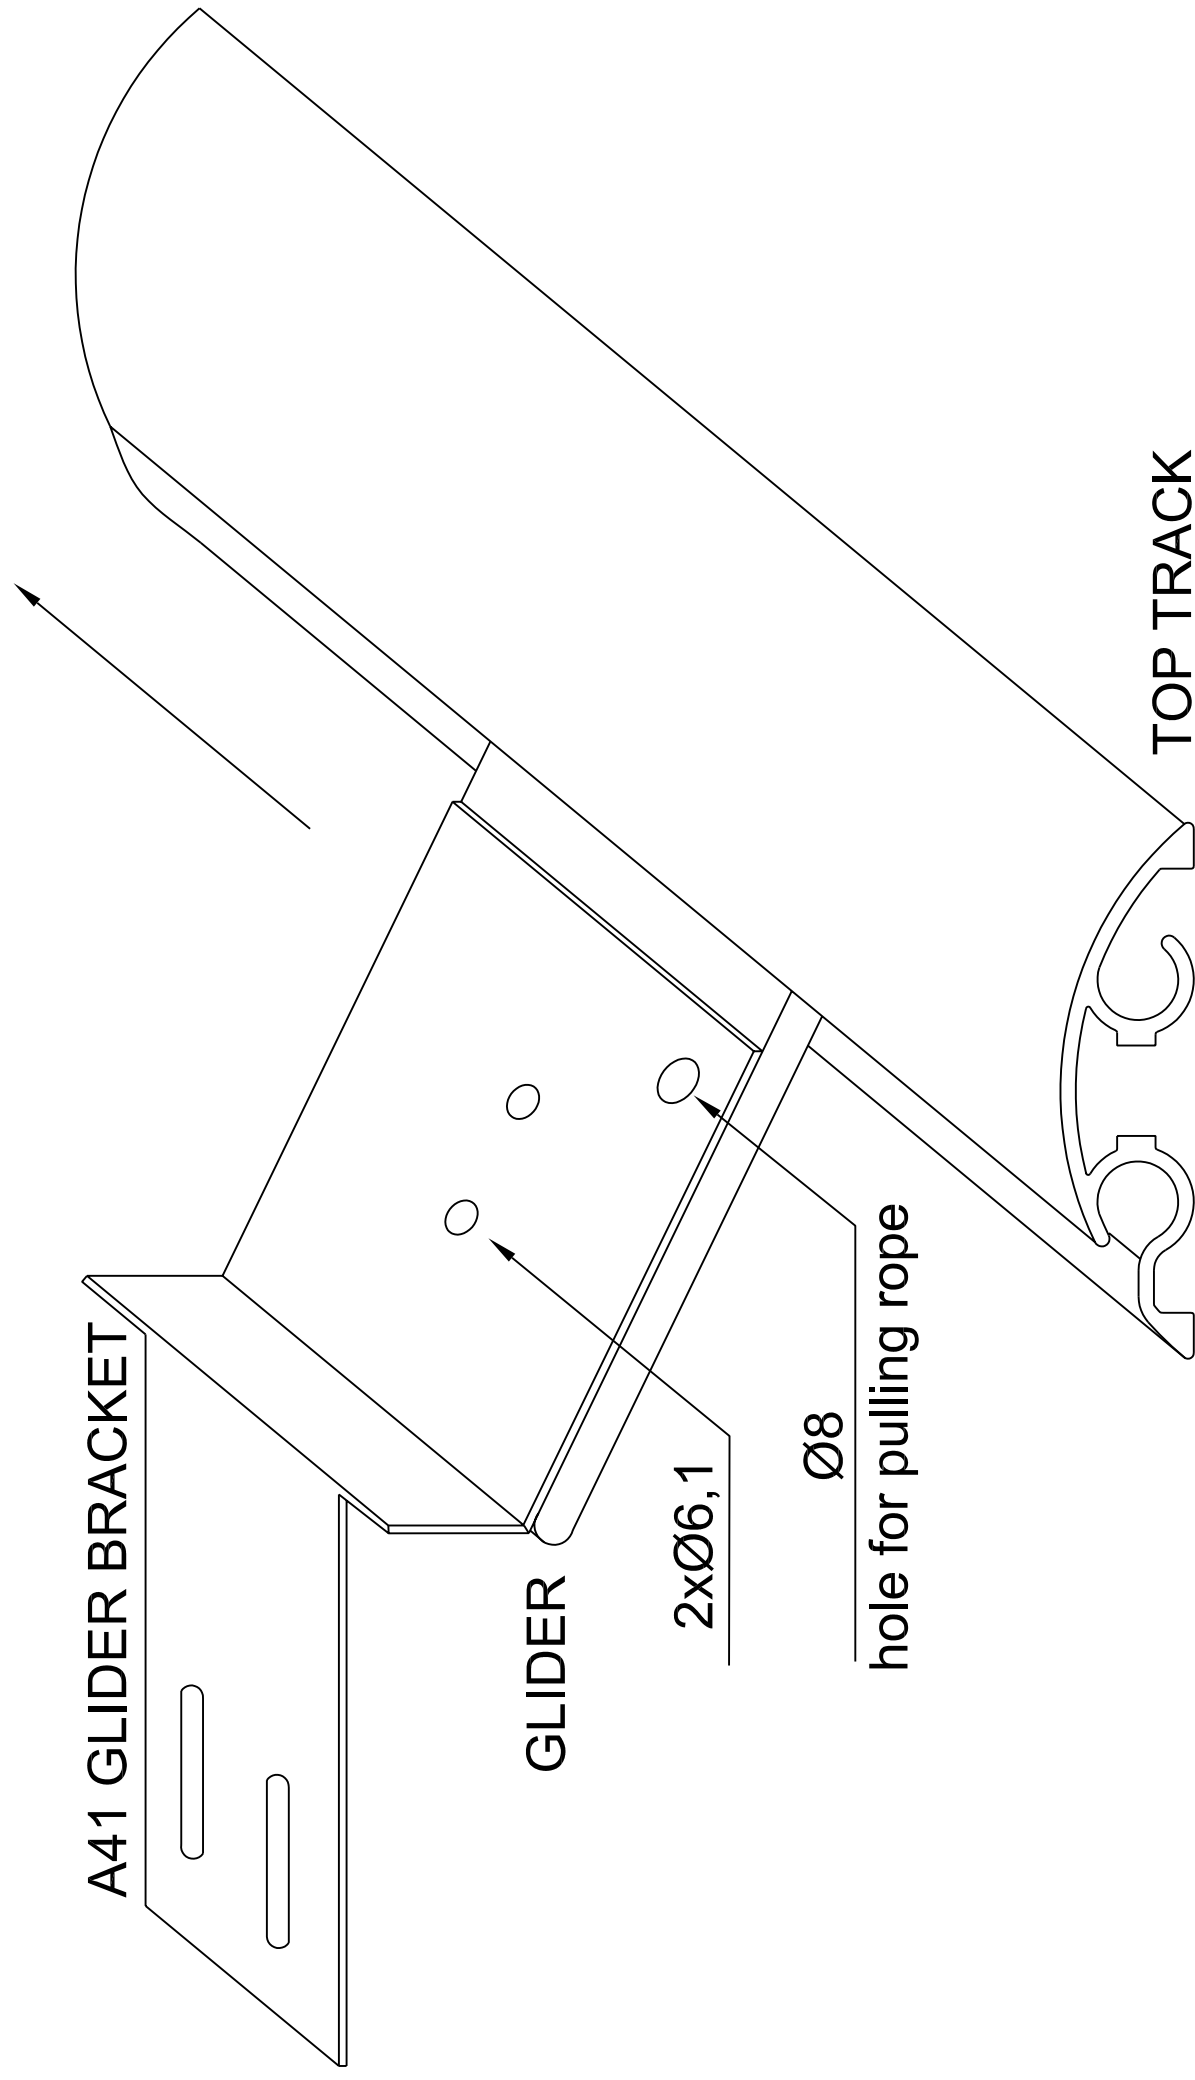


340 MANUAL Fix the Cover to the Leading Bar.

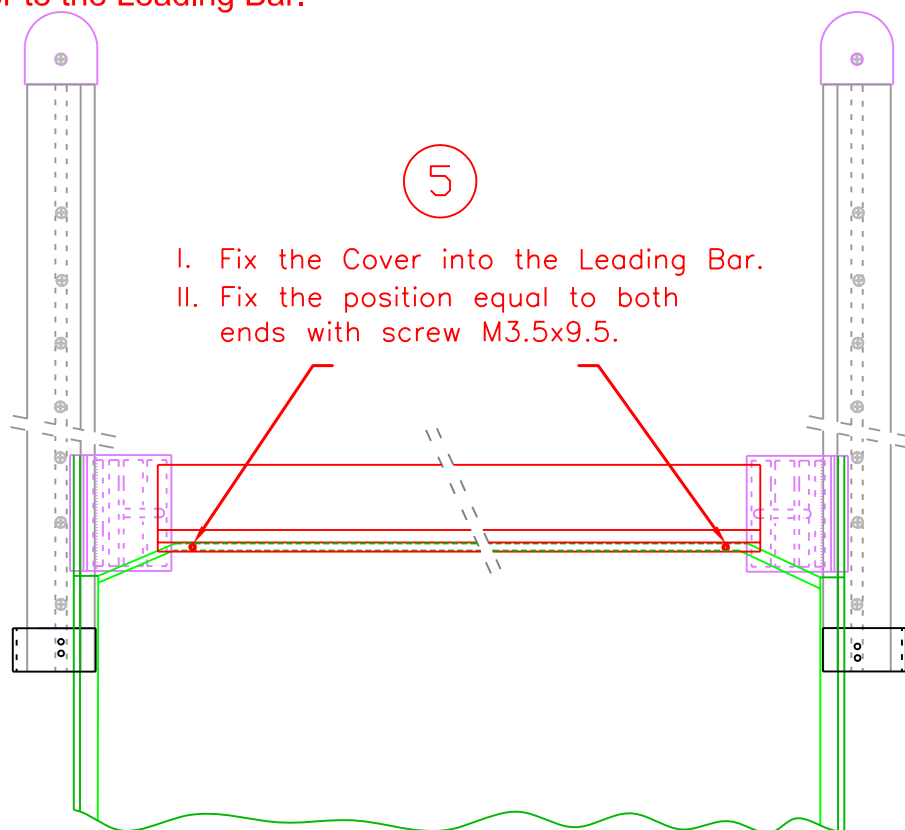


341 MANUAL Fix the Glider Bracket.

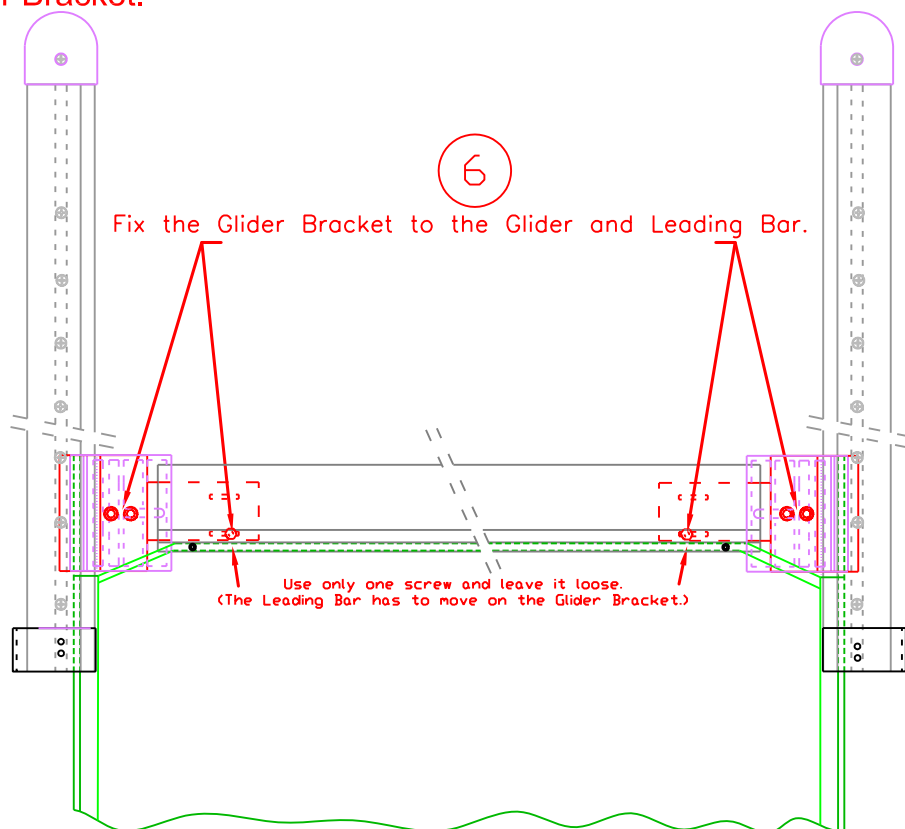


342 MANUAL Fix the Cover Closing Rope

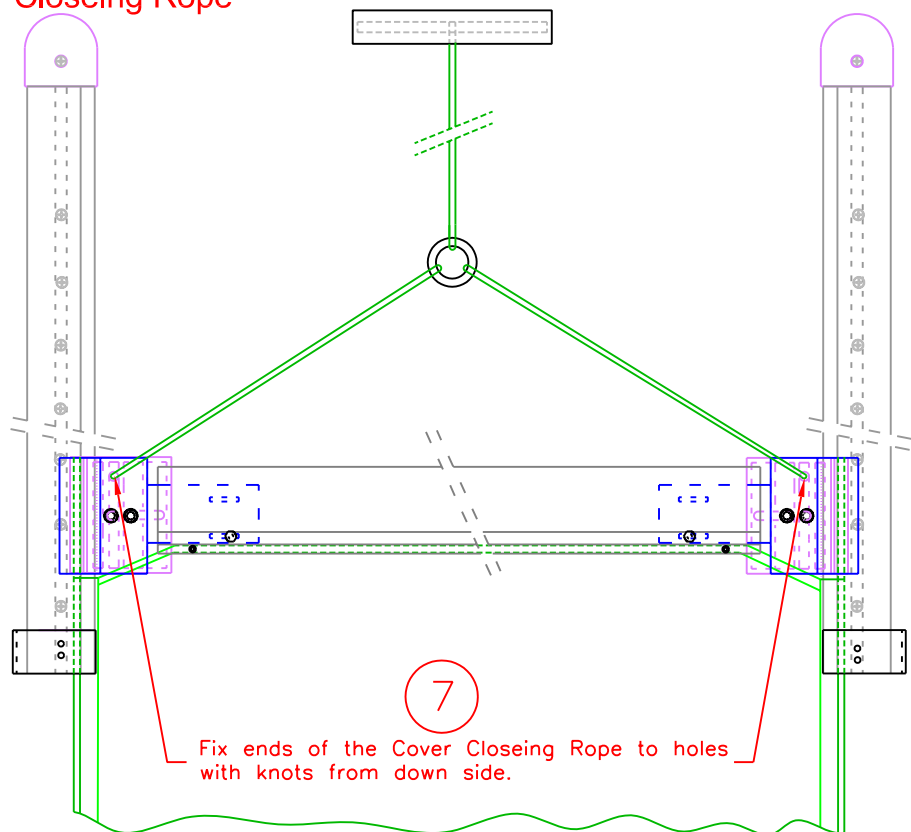


343 MANUAL Move the cover.

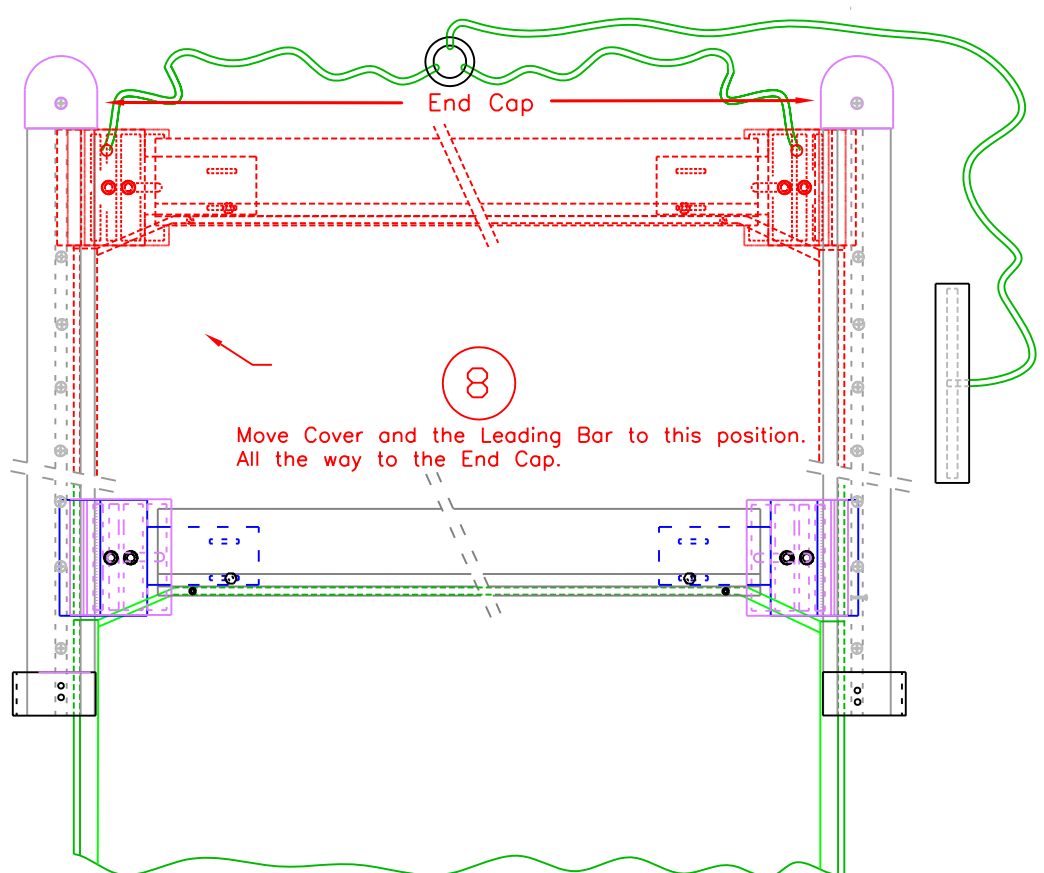

344 MANUAL Install the Mechanism.

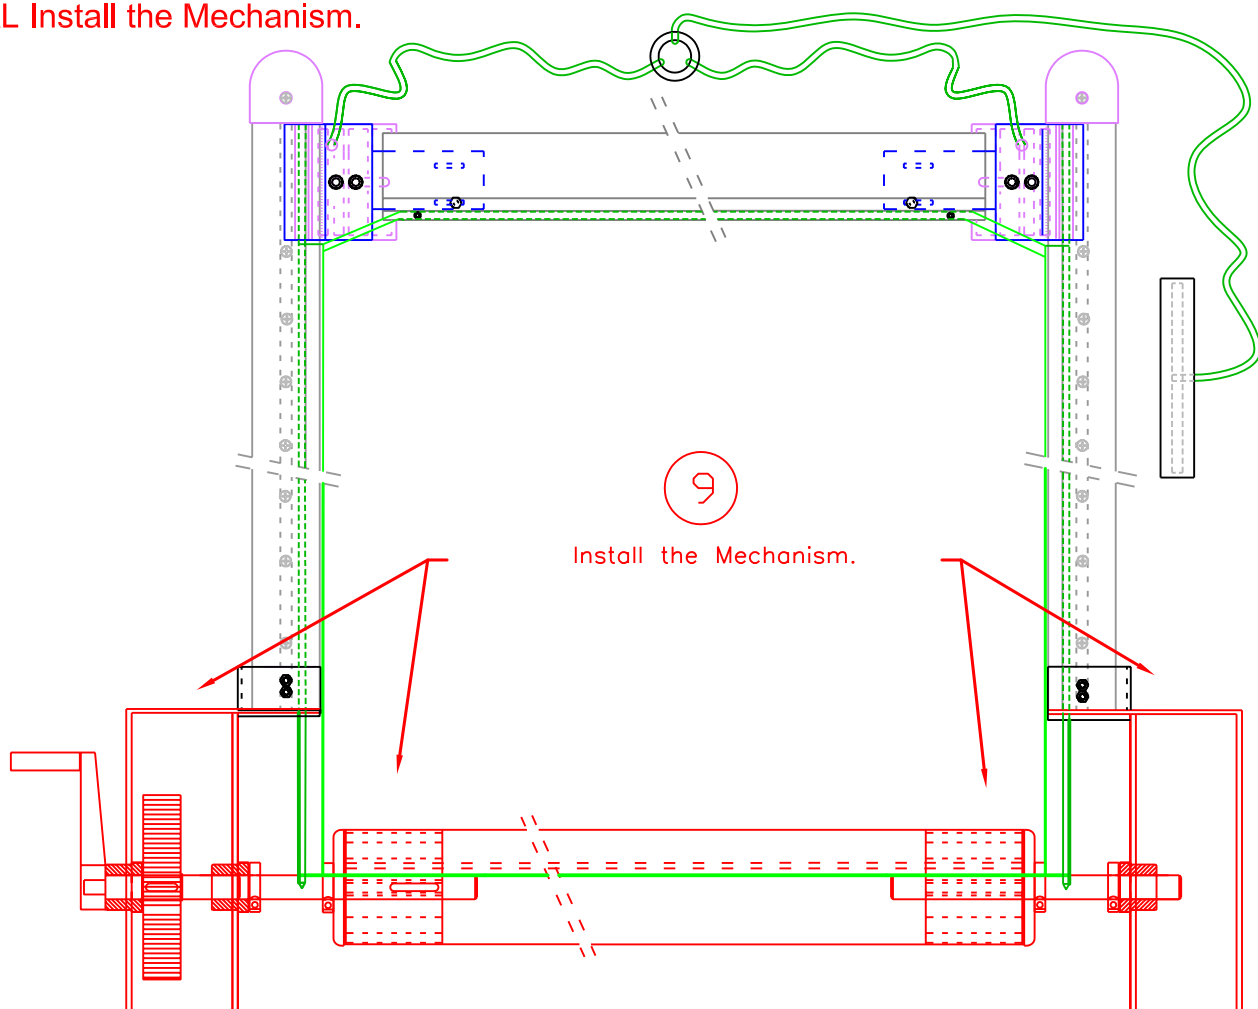

345 MANUAL Connect the Guide Bracket.

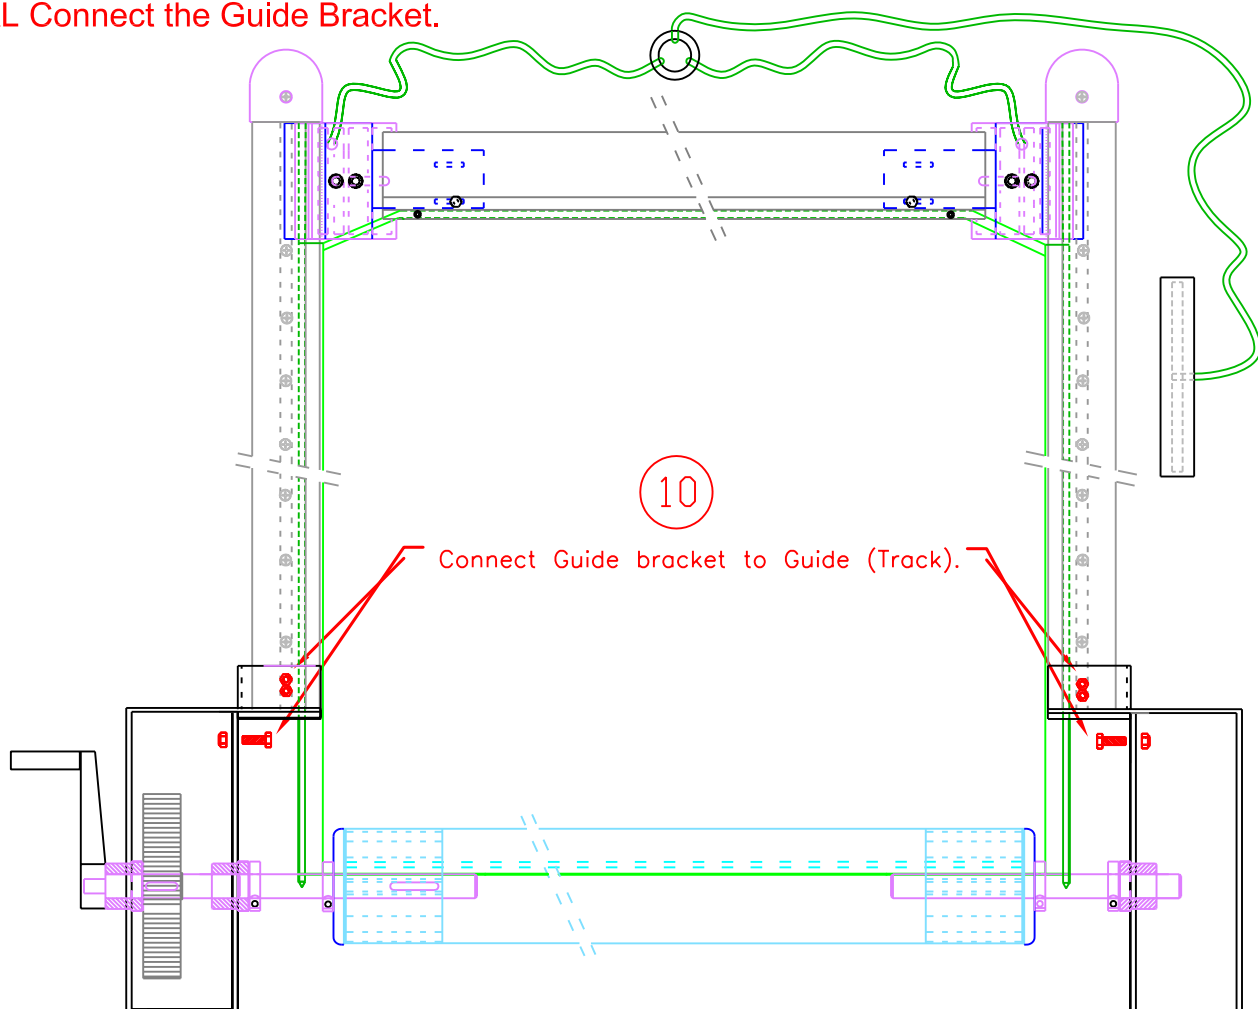

346 MANUAL Fix the Cover to the Rollup tube.

11

- I. Fix the centre screw.
- II. The Cover shall go ca 40mm outside the roll-up tube on both ends.
- III. Fix the screws on the ends.
- IV. Make the folds equal on both sides 500mm from the ends.
- V. Fix the rest of the screws every 20cm.


①

Roll-up tube.

40mm


40mm

COVER ADJUSTMENT

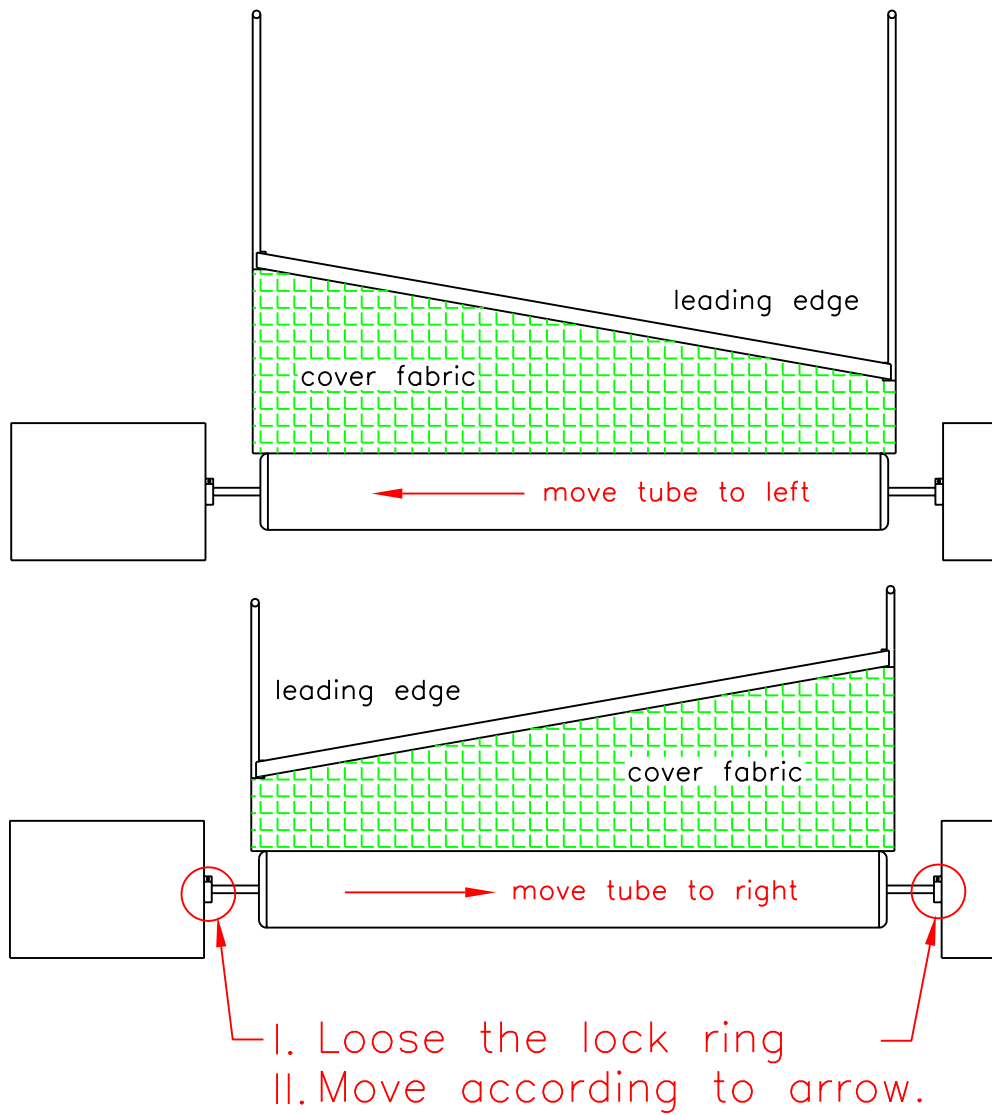

TOP TRACK

Free movement of Gliders.

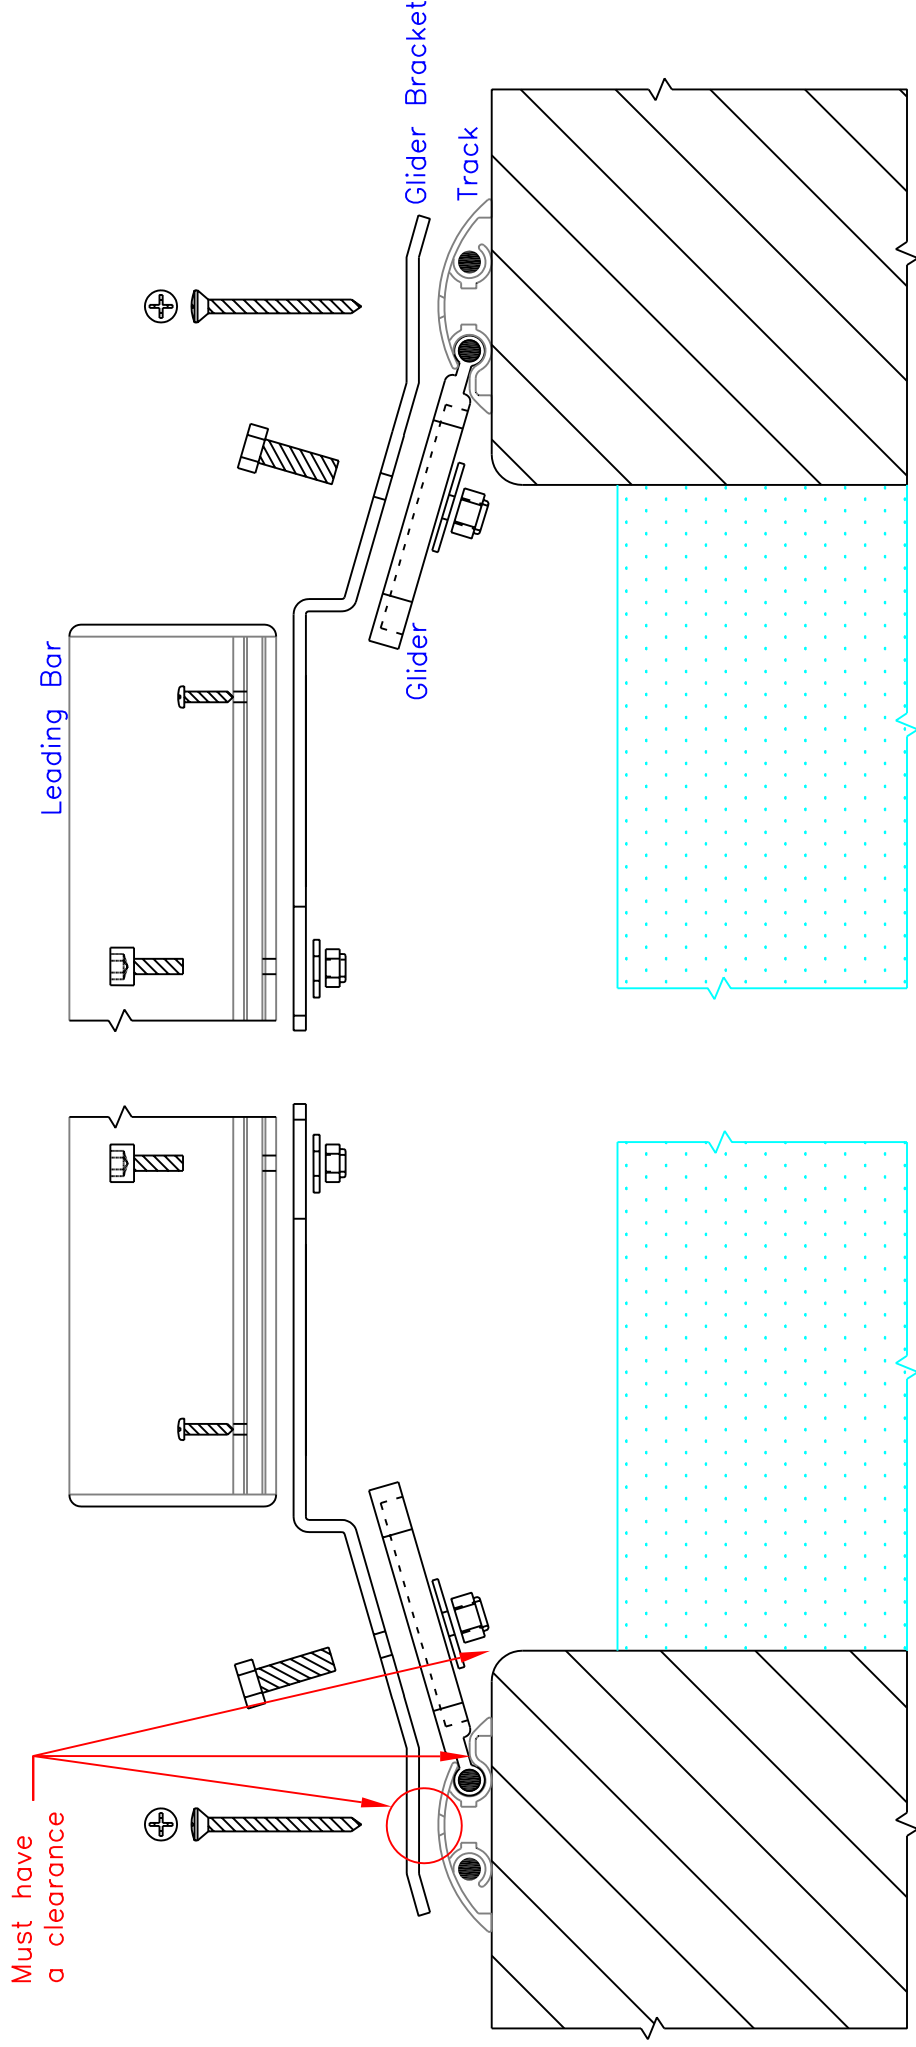

PoolLock maintenance procedure:

1. Remember on lubrication (see instruction in this section)
2. Check the track grooves for dirt and spray out the dirt with high pressure water flow device.
3. Never use greased or thick solid lubrication out the dirt with high pressure water flow device.
4. Clean the cover canvas (see cleaning instruction). Be very careful when you walk on the cover.
5. Check the screws for loosening.
6. Change the hydraulic oil after 1 month of use of the new installed cover (to clean the system).
7. Check hydraulic oil level in the oil tank of power pack. Minimum level of the tank.
8. Check hydraulic pressure (see section in Adjustments). Do not use higher pressure than it is necessary (adjust the pressure) that the cover can be stopped by holding it back with your hand).
9. Check the rope for movements.
10. Check the glider for movements through the tracks – clearance (see section in Adjustments).

1024. CLEANING OF THE COVER CANVAS

CAUTION: Always keep the water level high in the pool when you clean the canvas and walk on it



TOP TRACK

Repairing of bended Glider Bracket.

